



# Airwheel R5

EN USER MANUAL

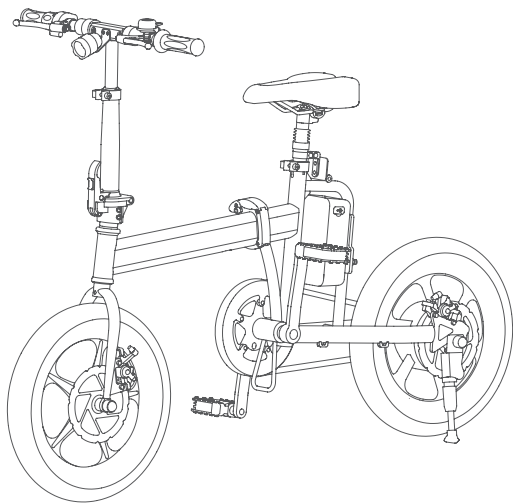


## Check Packing Contents

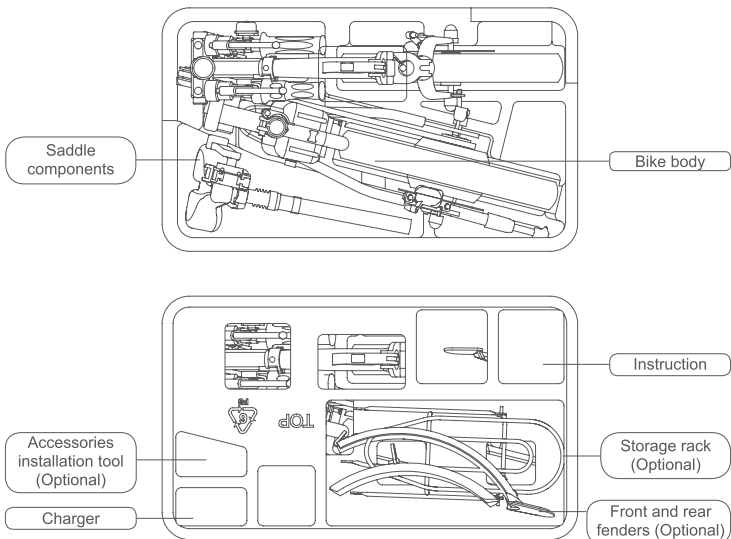



### Packing list

Bike body	1 pcs	Other accessories(Optional)	1 unit
Charger	1 pcs	Accessories installation tool (Optional)	1 unit
Instruction	1 pcs	Saddle components	1 unit


# R5 Diagram

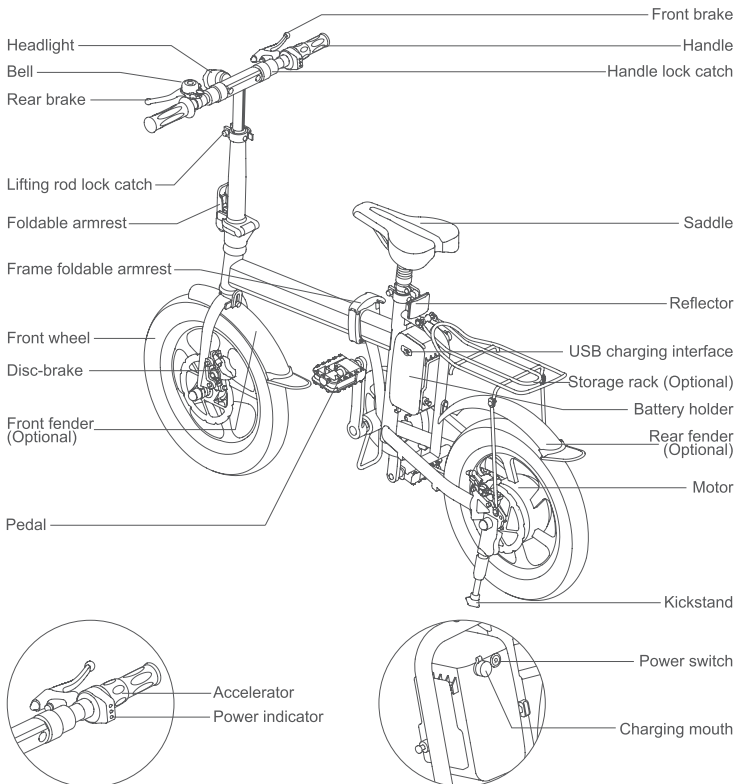

## R5+/R5S Diagram

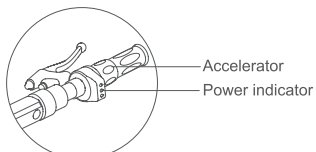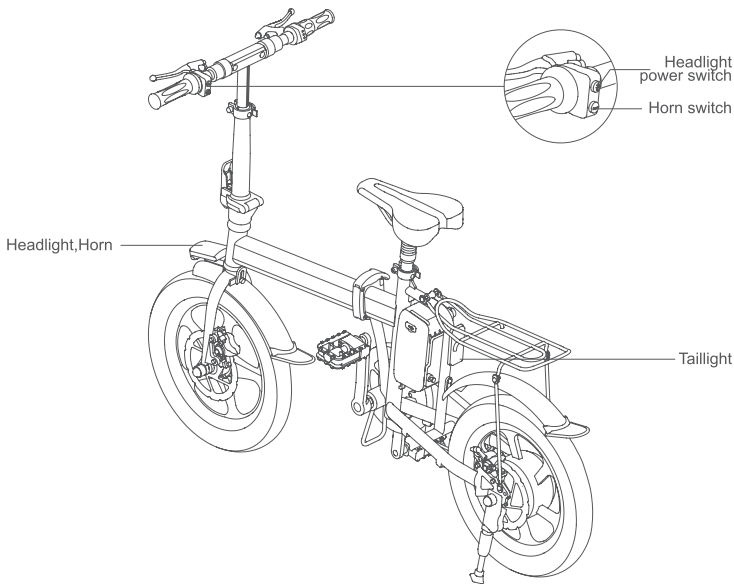

R5+

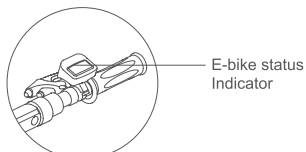

R5S  
(Power-assisted mode)

# Specifications

## Main Technical Parameters

Size	1320mm×550mm×1180mm	Item weight	~18.5kg
Folding size	710mm×380mm×700mm	Max. load	100kg
Tire size	16 inch	Max. speed	≤20km/h
Charging voltage	AC220V 50-60Hz	Max. Permissible Gradient	~15°
Charging time	About 180min/360min	Applicable temperature	-10°C ~40°C
USB output voltage	5V	Range	≥25km
Battery capacity	214.6Wh/429.2Wh		

## Main Technical Parameters Of Storage Battery

Storage battery type	Lithium battery	Nominal voltage	36V
----------------------	-----------------	-----------------	-----

## Main Technical Parameters Of Motor

Motor type	Brushless motor	Nominal voltage	36V
Continuous power output	235W	Rated output torque	5.3N.M
Rated speed	390r/min		


## Main Technical Parameters Of Controller And Charger

Undervoltage protection value	≥30.5V	Over-current protection value	≤18A
-------------------------------	--------	-------------------------------	------


## Warning

Please do not throw away the waste battery, so as not to pollute the environment. The waste lithium battery of the product is to be recycled by the enterprise or dealer, and the government designated outlets.


## Use the Bicycle

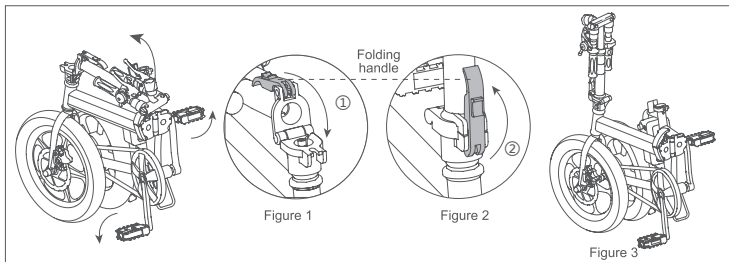


① Take R5 out of the package bag, unfold pedals and kickstand. Push the head in vertical direction (see Figure 2 - ① arrow), the folding handle along with the bike head is to be down-and-backward to the slot and then button up (see Figure 2 - ② arrow). The state of fastened folding handle is as Figure 3 shows.

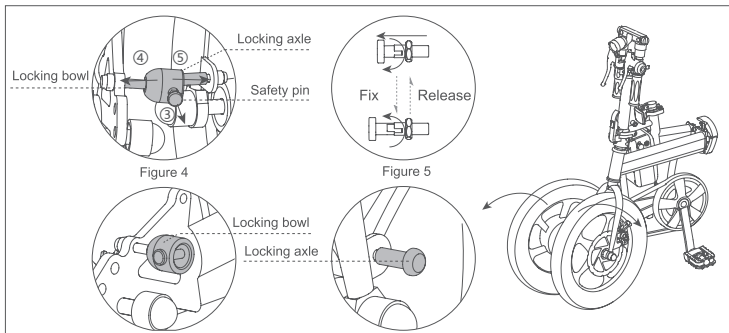

② The locking axle and locking bowl are located between the front and rear wheels. Pull the safety pin between the locking axle and locking bowl gently (see Figure 4- ③ arrow) and rotate 90° to fasten (the state of safety pin is as Figure 5 shows). Separate the locking axle and locking bowl (see Figure 4- ④ & ⑤ arrow) to separate the front and rear wheels, and rotate safety pin 90° to release.

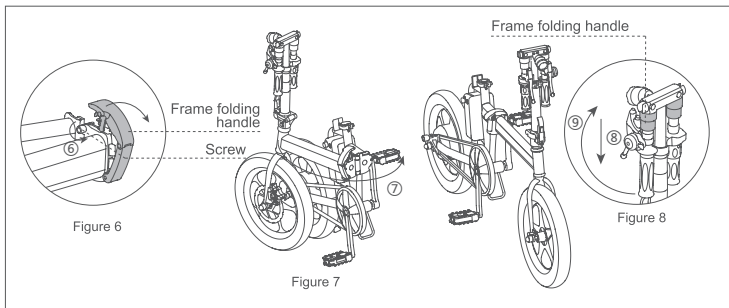

3 Rotate the screw in the frame counterclockwise (see Figure 6- ⑥ arrow), open the frame folding handle and unfold the frame (see Figure 7- ⑦ arrow). Close the folding handle, tighten the screw clockwise and fasten the frame folding handle. Pull down the handle lock catch (see Figure 8- ⑧ arrow), rotate the handle to a horizontal position (see Figure 8- ⑨ arrow) and release handle's lock catch.

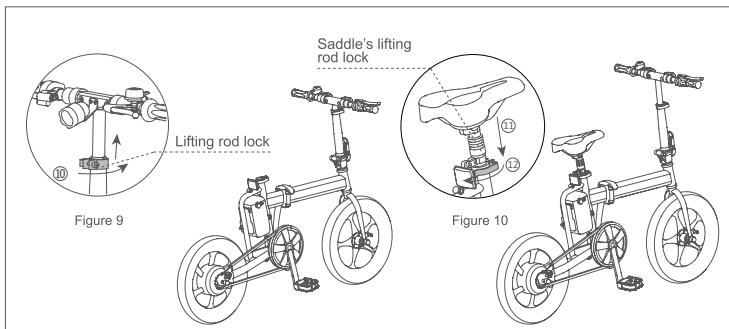


4 Open lifting rod lock (see Figure 9- ⑩ arrow), adjust height and close lifting rod lock. Adjust the saddle height and install it (see Figure 10- ⑪ arrow) and close saddle's lifting rod lock (see Figure 10- ⑫ arrow).

# Get Started


R5/R5+ provides riders with three different riding modes.

## 1. Electricity-assisted mode


Set right the head, fold kickstand and fasten frame. Adjust bike head and saddle position to ensure a comfortable riding experience. Find the power switch in the one side of the battery, start it and hold the handle. First sit on the saddle and step on the pedals one foot by one foot. When riders are ready to ride it, they can push the accelerator in the right handle to accelerate.

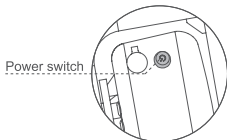

Open the power switch . Starting is completed.

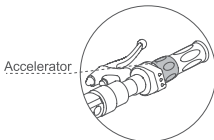

Pull down the accelerator with the right hand to speed up and ride.

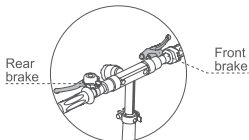

Long press the brake button, release it when slow down or stop.

## 2. Man-powered mode


Set right the head, fold kickstand and fasten frame. Adjust bike head and saddle position to ensure a comfortable riding experience. Find the power switch in the one side of the battery, start it and hold the handle. First sit on the saddle and step on the pedals one foot by one foot. Rides can pedal it to go forward.

## 3. Power-assisted mode


Turn on the power switch. Power sensor can sense the rotation, and then give signal to the controller when the riding ring exceeds three rings, so that power-assisted mode is activated. According to different riders' force, the level of power assistance changes. When braking, it is out of power-assisted mode. If pedals reverse, it will realize a faster exit of power-assisted mode. The power-assisted mode is to make riding easier.

R5S does not support pure electric mode


# Learning Skill

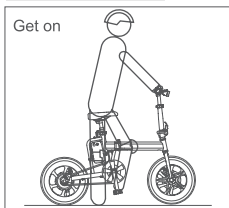

Get on  
Fold the kickstand, open the power switch and step on the pedal one foot by one foot.

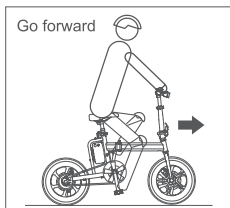

Go forward  
Right down to move accelerator to accelerate.

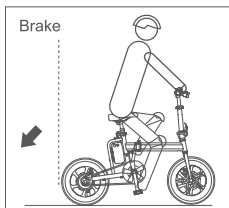

Brake  
Hold the brake.



## Operating steps for beginners (electricity-assisted mode)

1. Fold the kickstand and turn on the power switch. Hold the handle and sit on the saddle.
2. One foot steps on the pedal and look straight ahead. Rotate accelerator with right hand to speed up.
3. When riders need to slow down or stop R5, riders put their fingers on the brake handle, and press the brake handle hard until the scooter slows down or stops.
4. When the brake is started, the accelerator automatically cut off power.



- Avoid using this product in bad weather conditions (e.g., rain, snow, or ice).
- Please confirm whether the brake can be used normally when riders want to use it.

## Safety

Please read User Manual carefully and follow riding requirements during the R5 ride. Please do not use it until riders have read User Manual carefully and learned the performance well. Do not lend it to those who cannot manipulate e bikes.

### Important Note:

No urgent acceleration, rapid deceleration and sharp turns. Do not excessively lean forward and backward. Do not over speed. When the electric quantity displays less power in the App or power switch lights flash, it is recommended that the rider stop riding. If riding, please keep a low constant speed. If there is a risk of falling, please protect personal safety first, do not consider R5. R5 may produce wear and tear which may influence on the performance in the process of riding and parking. So before riders ride the R5, it is necessary to do the following inspections:

1. Rider needs to check whether the R5 is installed firmly, and is damaged or not.
2. Rider needs to check the brake function and tyres, and to check whether the handle and folding lock is fastened. If not, please tighten the screws.
3. Rider needs to check whether folding mechanism has been locked.
4. The chain should be tightened meaning that the distance between chain prolapse and tension is 10~15mm.
5. Brake should be reliable and flexible to reset and it should increase the braking distance in rainy, snowy and downhill riding.
6. Adjust the handlebar, saddle height, and it must not be higher than the safety points on the vertical pipe and the saddle tube. After adjustment of the horizontal pipe, the vertical pipe, saddle and saddle tube, they should be fastened,  $\geq 18N.m$  is the recommended torque.
7. Rider needs to find an open space to practice, at least 4m\*20m area, indoor and outdoor.
8. Rider needs to have a full understanding of the surrounding environment to avoid the interference from the vehicle, pedestrians, pets, bicycles and other obstacles.
9. Rider needs a skilled assistant in the side. The assistant is proficient in riding R5 and familiar with the guidelines for the use of scooters in all matters needing attention and riding method.

You need lots of practice to grasp the skill before you ride R5 safely. If you are not skilled, or fail to follow the user guide of this product, it may cause rider or others injury or property loss. Our company only takes the responsibility for product defects or damage, and we are NOT responsible for physical injury or property loss related with using products.

### Parking note:

1. When you get off, the power switch should be turned off in case of pushing the accelerator by accident making it out of control.
2. The power should be turned off when parking.
3. For your riding safety and for the R5's superb condition, please maintain and clean it regularly.

## Adjustment and maintenance:

1. Newly purchased vehicles should be adjusted in good condition, if there is any question, please refer to the aftersales staff.
2. The adjustment method of the brake is the same as the ordinary bicycle. The key is not only to be able to brake effectively, but also to release the brake without block (otherwise it will consume a large amount of electric energy) and make sure the brake-power off function is effective.
3. To replace tires, it is the same as ordinary bicycle. Due to the rear wheel hub and circuit, riders need to pay attention to the lines and press the two screws in the rear axle. The torque of the rear wheel is recommended  $\geq 30N.m$ , the front wheel  $\geq 18N.m$ .
4. Have a maintenance and a comprehensive examination every 800 km. check whether the front and rear wheel screw is locking, check whether the pattern of cover tyre is worn; check whether the tire pressure is appropriate, the drive system is smooth, and each part of the joint is normal: check whether the brake line zip-fastener is used in lubrication. And inject suitable amount of lubricant to the central axis, the front axle, rear axle, flywheel, fork, rotating parts and brake wiring. 40# oil and butter as a lubricant are recommended.
5. In the use and maintenance, if you find that you cannot solve the problem, please contact the aftersales staff. Unauthorized demolition of Airwheel caused the failure and damage, is not in the company's free warranty.
6. When the vehicle is used for a period of time, it should be requested professional or designated service station for a comprehensive inspection and adjustment to ensure the comfort, safety and normal service life.

## Chain adjustment:

Adjust the nut left or right to find the suitable looseness. When adjusting the chain, it must also be aligned with the front and rear sprockets in a straight line. After adjustment, refasten the nut in the rear wheel, lock and adjust nut to have a final check. The chain sag between the two chain wheels should be 10~15mm. Clip mouth is back to install.

## Battery usage:

1. Auxiliary charge: for short delivery time, users can directly use the battery. If the delivery time is longer (2 months or longer), the battery will lose power during storage and transport. It is better to charge the batter before use. To charge it requires plugging the exclusive charge to the battery charging hole and connecting AC220V power source for 2~4 hours until the charger is full.
2. The normal charge of the battery: the operation of R5 is also the discharge process of the battery. The battery should be charged immediately after the use of the power-assisted vehicle.
3. Please turn off the power if not riding.
4. The connectors of the battery box should be fixed tightly according to the requirements (the battery box connecting line has been reliably connected before ex-factory). Loosen or wrong connection will cause the related parts abnormal and lead to serious damage.
5. Lithium batteries can not be close to open fire or high temperature heat source, can not be thrown into water and can not be exposed in the sun in high temperature season.
6. Do not disassemble and decompose, as the internal part of them lithium battery has been packaged intactly.
7. The waste lithium battery of the product is to be recycled by the enterprise or dealer, and the government designated outlets. Please do not throw away the waste battery, so as not to pollute the environment.

## Charger usage:

1. Carefully check whether the charger's rated input voltage (AC220V) and the grid voltage is consistent.
2. When the vehicle needs charging, first connect the battery to the charger, and then connect the charger to AC power source. The charging indicator is red meaning it is charging. When it turns green, it will take 15 minutes to be fully charged. The charging time is about 2-4 hours (depending on the quantity of remaining battery).

## **Matters needing attention in charging:**


1. When charging, please put it in the safe place where children can not touch.
2. It is not advised to use it when it is not fully charged.
3. Do not use other brands of chargers, and other brands of batteries are not suitable for the use of the charger.
4. Do not disassemble, as the charger contains high voltage circuit.
5. Prevent liquid and metal particles from penetrating into the inside and be aware of falling and impact, so as not to cause damage during use and storage.
6. When charging, do not affix any items.

## **Attention:**


1. Do wear helmet, gloves, elbow/knee pads or other necessary protection gears.
2. Do confirm the reliability of brake, saddle, frame, handle and wheels in case of accidents.
3. Riders should pedal it when climb bridge, ride against the wind and overload.
4. Do not ride on the bumpy and wet roads, such as earth road, cobbled road or snowing and watery roads, in case of accidents and danger.
5. Do not put items in the handles as it may be out of control.
6. R5 is only suitable for one person to ride. Do not carry person in the storage rack.
7. Do not ride Airwheel in extremely cold winter.
8. Do not ride Airwheel in the rain.
9. Don't ride overspeed in the downhill. If brake, do not use the front brake in high-speed riding, in case of danger.
10. Do not inject oil in the brake in case of braking failure.
11. Do not allow pregnant woman, children under 15 or the aged above 60 to ride Airwheel.
12. Drunk or drug riding Airwheel is prohibited. People with constrained action and reaction capacity are not allowed to ride Airwheel.
13. Do not ride Airwheel in other unadvised situations causing by either personal or objective reasons.
14. R5 is not suitable for long-distance travel.
15. Develop good habits to charge in time. Before ride, please ensure R5 has enough electricity. It is very important to form the habit of charging in time every day so that the battery can serve you a longer period of time.
16. Almost all kinds of batteries will be affected by the environment. In general, the electric discharge performance is better when the air temperature is high. When the temperature drops to 0 degrees centigrade, battery power may fall more than 1/3. So, in winter or in cold area, mileage reduction is normal. When the temperature rises to 20 degrees above, the range will recover.
17. Do not insert metal objects (such as wires, keys etc.) into the battery charging hole or put in the +/- contact, so as to avoid the short circuit of the battery, ignition and safety loopholes.
18. Do not use other brands chargers and accessories or there may occur accidents and Airwheel is not responsible for the accidents.
19. Lithium batteries cannot be close to open fire, and flammable and explosive corrosive gases.
20. Do not disassemble and decompose the battery, so as not to damage the internal parts.
21. It is strictly prohibited to use wire or conductor to connect the batter, so as to avoid danger and damage to the battery.
22. The lithium battery should be handled with care, to avoid accidents.
23. To charge, first connect the battery charge interface, then the power source.
24. It needs power off to store. It needs to charge no more than 3 months and then store it.
25. The company shall not be liable for any loss or damage resulting from self-refit and self-repair, which may cause you to lose your free warranty scope. If something goes wrong, please contact aftersales personnel.
26. This product might be limited to use on private road (check the regulations in force in the territory of use). We recommend using suitable protective equipment.

Airwheel reserves the right of final interpretation of all the terms and conditions of this User Manual.

# Foldable

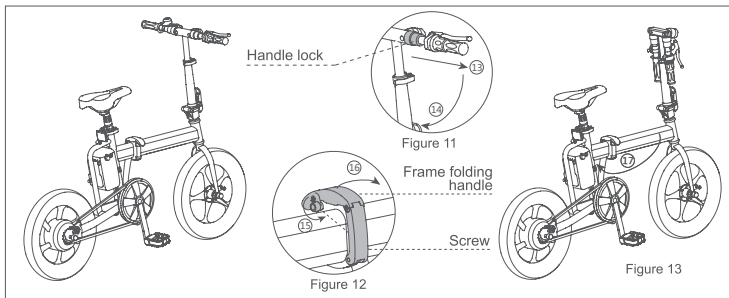

**1** Adjust the heights of the bike head and saddle to the lowest. Pull the handle lock (see figure 11-13 arrow), fold down the handle (see figure 11-14 arrow). Rotate the screw in the frame counterclockwise to loosen it (see figure 12-15 arrow), open the frame folding handle (see figure 12-16 arrow) to let the frame be folded as Figure 13-17 arrow shows. Close the frame folding handle, tighten the screw clockwise to fasten the frame folding handle.

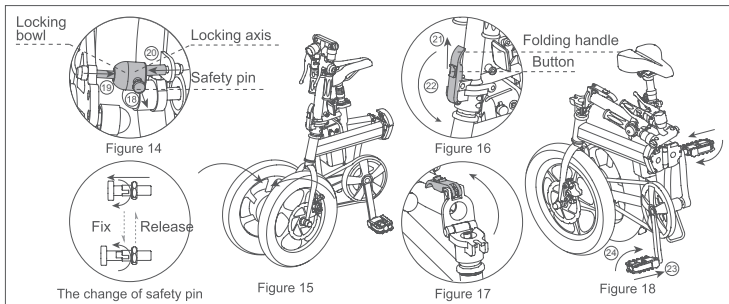

**2** Gently pull the safety pin in the locking bowl (see figure 14-18 arrow) and rotate 90° to fix it, as shown in Figure 15, fold the frame and combine the locking bowl with the locking axis (see figure 14-19 and 20 arrows), and rotate 90° to release safety pin. Push upward the button in the folding handle (see figure 16-21 arrow), fold down folding handle (see figure 16-22 arrow). As shown in Figure 17, fold the bike head. Pull the pedals and fold upward (see figure 18-23 and 24 arrows) to fold pedals.

# Download APP




Scan QR code to download


\*Support Android 4.3 or higher, iOS 7.0 or higher.


## APP Instructions


1. Turn on R5 power button, and start App as well as Bluetooth.
2. Click the search button and do as the follows to connect (verify password is 11111111).
3. Refer to official website or give calls for details.

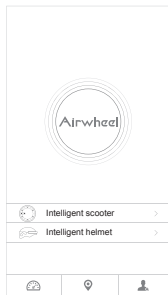


Click the Intelligent scooter in the App interface.

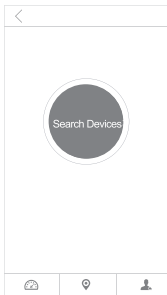

Click the search button or .

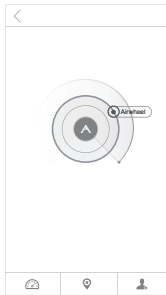

Search Airwheel nearby,click the searched Airwheel model to connect.

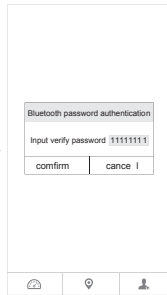

Input the verify password: 11111111 to connect.

## Other Functional Instructions

- USB charging interface

Chargeable

(compatible with mobile phones and digital equipment).



- E-bike status Indicator

Power light

Low battery indicator




Power indicator

Headlight opening indicator

- Power indicator

When the power indicator is red, it is suggested not to ride.

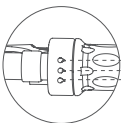

Green light-high power


Yellow light-middle power

Red light-low power

- Battery box can be disassembled  
Separate the battery box wire and frame line before removing the battery box ( to install batter, insert the battery box first and then connect).

Pull the safety pins as the figure shows, move the battery box in parallel and take out of the battery box to charge.


Uncover the dust cap in the batter box and connect the charger to charge.

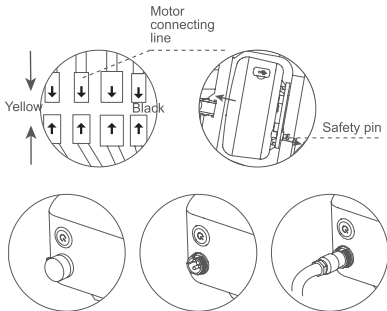

- Shock-absorbing saddle



Riders can adjust the screw to adjust the elastic force of the spring to suit for people with different weights, in order to achieve better shock absorption effect.

Tighten the regulating screw in the bottom of the saddle clockwise with hex wrench to reduce the elasticity of the spring, so as to reduce damping effect. If improve the elasticity of the spring, it will increase damping effect.

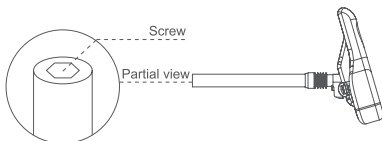

- Fender (optional, if any)

Align the front fender and rear fender to the circular rod holes in front and rear wheels. Tighten the front fender with a screw and nut and rear fender with wrench.

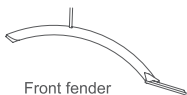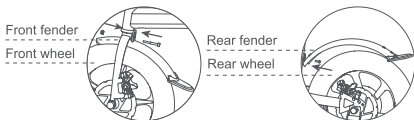




Front fender



Rear fender

- Storage rack (optional, if any)

Align the round holes (above and below) in the storage rack to the round holes in the saddle and rear wheel. Tighten the top part of the storage rack with screw and the lower part with screw and nut.

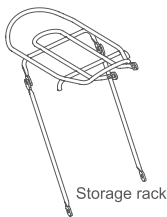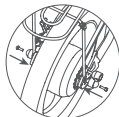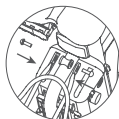

Storage rack

# Загрузка приложения



Сканируйте QR-код, чтобы загрузить приложение


\*Поддерживает Android 4,3 и выше, iOS 7,0 и выше.

## Инструкции приложения

1. Включите кнопку питания R5 и запустите приложение, одновременно включив блютуз.
2. Кликните на кнопку поиска и выполните соединение (пароль подтверждения 11111111).
3. Более детально с информацией можно познакомиться на нашем официальном сайте или позвонив нам.




Нажмите на "Умный скутер" в интерфейсе приложения.

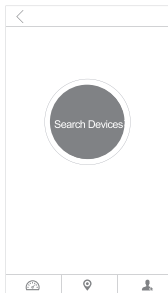

Нажмите на кнопку поиска или .



Найдите устройство Airwheel, нажмите на найденную модель Airwheel, чтобы выполнить соединение.

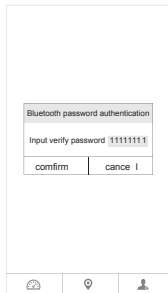


Для завершения соединения введите пароль:11111111.



# Др. функциональные инструкции

- USB-порт зарядки  
Служит для подзарядки (совместим с мобильными телефонами и цифровыми устройствами).

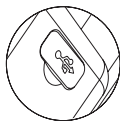


- Индикатор статуса E-bike

Лампочка питания  
Индикатор низкого уровня зарядки




Индикатор зарядки  
Индикатор поворотников

- Индикатор питания  
Если горит красный индикатор, не рекомендуется ехать.

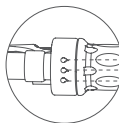


Зелёный свет – высокое напряжение  
Жёлтый свет – среднее напряжение  
Красный свет – низкое напряжение

- Отсек для батареи можно разобрать  
Отсоедините провод батарейного отсека и провода рамы перед тем, как извлекать отсек для батареи (чтобы установить батарею, сначала закрепите отсек для батареи, а затем выполните соединения).  
Вытащите штырь безопасности, как показано на рисунке, вытолкните батарею и извлеките её для зарядки.  
Снимите пылезащитную крышку отсека и подключите зарядное устройство для подзарядки.

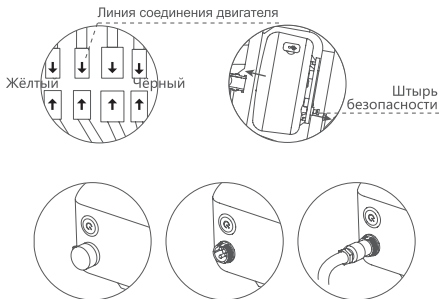

- Амортизационное седло  
Велосипедист может с помощью винта отрегулировать силу упругости пружины, в зависимости от своего веса и для достижения лучшего эффекта амортизации.

Затяните регулирующий винт в нижней части седла по часовой стрелке при помощи шестигранного ключа для уменьшения упругости пружины, с тем чтобы уменьшить амортизирующий эффект. Если увеличить эластичность пружины, это увеличит эффект амортизации.

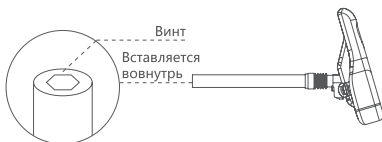


- Крыло (необязательный аксессуар)  
Совместите отверстия на переднем и заднем крыльях с круглыми отверстиями переднего и заднего колёс. Затяните переднее крыло с помощью винта и гайки, а заднее крыло – с помощью ключа.

Переднее крыло  
Переднее колесо



Заднее крыло  
Заднее колесо

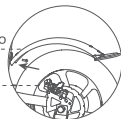

- Багажник (необязательный аксессуар)  
Совместите круглые отверстия (вверху и внизу) на багажнике с круглыми отверстиями седла и заднего колеса. Закрепите верхнюю часть багажника с помощью винта, а нижнюю – с помощью винта и гайки.

